


LC303 MAINTENANCE

Check the clearance.

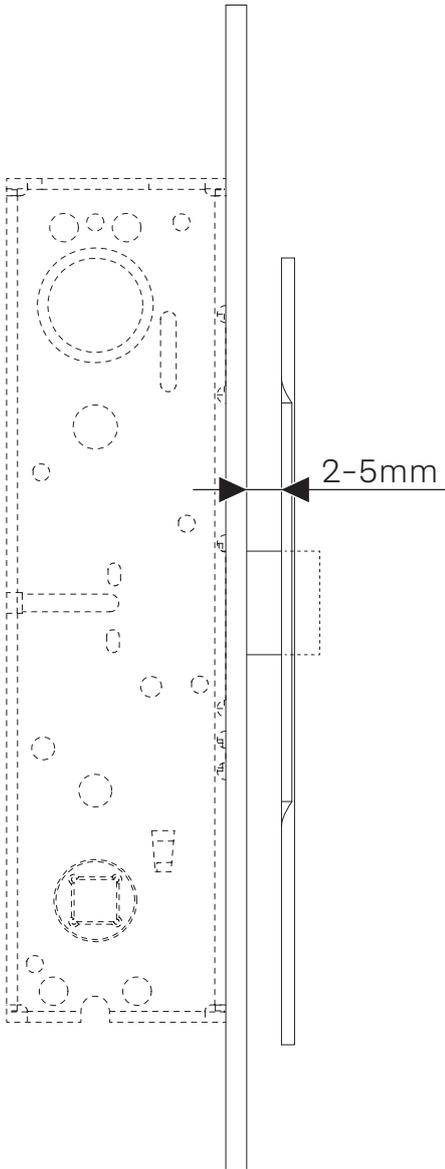

Lubrication at least twice a year.

