

Obermatic accesories

Montion sensors

Motion sensors give an opening impulse to Obermatic.

| Model | Description |
|------------|---------------|
| DETECMOVUD | Motion sensor |




Safety sensor

They send an impulse immediatly to Obermatic to Stop the door movement if an object or person is detected in the parth of the door.

The safety sensors are installed on the top of the door, on one side or both.

| Model | Description |
|-----------|-----------------------|
| SENSEGINT | Indoor safety sensor |
| SENSEGEXT | Outdoor safety sensor |

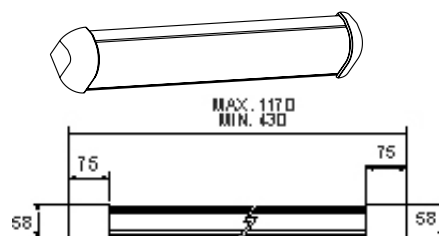

TM1S - TM1E

Synchronizer

This device has two input signals and two output. The delay and hold time of output signals can be controlled through potentiometers.

| Model | Description |
|---------|--------------|
| OBMSINC | Synchronizer |

